

Inductive type proximity sensor

UP ☐ Round ☒ Square type

INSTRUCTION MANUAL

Thank you for purchasing HANYOUNG product.
Please check whether the product is the exactly same as you ordered.
Before using the product, please read this instruction manual carefully.
Please keep this manual where you can view at any time

HEAD OFFICE

HANYOUNGNEX CO.,LTD

1381-3, Juan-Dong, Nam-Gu Incheon, Korea.

TEL:(82-32)876-4697

FAX:(82-32)876-4696

http://www.hynux.net

INDONESIA
FACTORY

PT. HANYOUNG ELECTRONIC INDONESIA

JL.CEMPAKA BLOK F 16 NO.02 DELTA

SILICON II INDUSTRIAL PARK

LIPPO CIKARANG CICAU, CIKARANG

PUSAT BEKASI 17550 INDONESIA

TEL : 62-21-8911-8120~4

FAX : 62-21-8911-8126

HANYOUNG NUX



Safety information

Before using the product, please read the safety information thoroughly and use it properly. Alerts declared in the manual are classified to Danger, Warning and Caution by their critically

DANGER	DANGER indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury
WARNING	WARNING indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury
CAUTION	CAUTION indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury

Warning

- If the user use the product with methods other than specified by the manufacturer, there may be bodily injuries or property damages.
- If there is a possibility of an accident caused by errors or malfunctions of this product, install external protection circuit to prevent the accident.

Caution

- Pay attention that it is possible to damage a proximity sensor by a short circuit when wiring load.
- Wiring to an applicable device shall be certainly connected by using compressing terminals or soldering.
- Do not use PNP type or NPN type indiscriminately.
- Please wire after ensuring whether input conditions are accepted to an applicable device.
- When there is a power or high voltage line close to the cord of the proximity sensor, wire the cord with shielding such as an independent metal conduit to prevent against proximity sensor's damage or malfunction.
- Although the proximity sensor has a surge absorption circuit, if there is any machine that has a large surging one (e.g., a motor, welding machine, etc) near the proximity sensor, connect a varistor, surge absorber, noise filter to a surge generating area.
- Effect of Consumption Current : When AC type of proximity sensor is OFF, the proximity sensor has little consumption current for an operation of the circuit. Because of this fact, the little voltage left in the load may be a cause of load reset defective, so please make sure this voltage is less than the load reset voltage before using.
- In case of a load current is small : When a loaded current of AC type of proximity sensor is less than 5 mA, wire a bleeder resistor with the load in parallel so that make the residual voltage of the proximity sensor be less than the loaded reset voltage.
- Make the ripple content of the rated voltage which supplied into DC (NPN, PNP) type of proximity sensor be less than the maximum $\pm 10\%$ of the ripple content.
- In case of using a condenser as a load, wire a current-limiting resistor in series so that set the peak current shall be within the loaded current of the proximity sensor.
- In case of an inductive load (e.g., a motor, relay, magnet, etc), connect the load with surge absorbing diode in parallel.

Suffix code

Model	Code	Information
UP	<input type="checkbox"/> S- <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/>	Inductive type proximity sensor
Sensing area size	8	8 X 8 mm
	12	12 X 12 mm
	18	18 X 18 mm
	25	25 X 25 mm
	30	30 X 30 mm
Structure type	S	Square type
	F	Flat type
Sensing distance	2	2 mm (Only with UP8S-2)
	4	4 mm (Only with UP12S-4)
	5	5 mm (Only with UP18S-5, UP25S-5)
	8	8 mm (Only with UP18S-8, UP25S-8, UP25F-8)
	10	10 mm (Only with UP30S-10)
	12	12 mm (Only with UP25S-12)
	15	15 mm (Only with UP30S-15)
Power Supply and Output type	20	20 mm (Only with UP40S-20)
	N	DC NPN type
	P	DC PNP type
	A	AC 2 wire type (But, UP8S, UP12S, UP18S is excluded)
	T	DC 2 wire type (Polarity)
Output type	U	DC 2 wire type (No polarity) (But, UP8S is excluded)
	A	Normal Open (N.O)
Sensing direction	C	Normal Close (N.C)
	-	No indication (Detect front side)
Connection structure	U	Detect upper side (Only available with the square type UP12S, UP18S)
	-	No indication (Cable type)
	CR	Relay connector type

- Pay attention at a position of attachment, divergence, slack and distortion of a sensing surface or proximity sensor.
- In the place of possibly occurring metal particles, make sure whether a sensing distance is properly working since it can be affected if metal particles stick to the sensing surface.
- Pay attention on using or storing the proximity sensor outdoors.
- Do not use the proximity sensor in an environment with chemical, solvent or corrosive.
- Please avoid as much as possible to put the proximity sensor in hot water or to use them in a place where generates high pressure steam.
- The contents of this manual may be changed without prior notification.
- The maximum cable extension length shall be within 200 m.

Specification

■ DC 3 wire type (NPN/PNP)

Model	UP8S-2□□	UP12S-4□□	UP 18S-5□□ UP 18S-8□□	UP 25S-5□□ UP 25S-8□□ UP 25S-12□□	UP30S-10□□ UP30S-15□□	UP 40S-20□□	UP 25F-8□□
Sensing distance	2 mm	4 mm	5 mm, 8 mm	5mm, 8mm, 12mm	10 mm, 15 mm	20 mm	8 mm
Setting distance	0 - 1.6 mm	0 - 3.2 mm	0 - 4 mm, 0 - 6.4 mm	0-4mm, 0-6.4mm, 0-9.6mm	0 - 8 mm, 0 - 12 mm	0 - 16 mm	0 - 6.4 mm
Response frequency	800 Hz	800 Hz	800 Hz	350, 250, 200 Hz	250, 100 Hz	100 Hz	200 Hz
Standard sensing object (mm)	Iron8×8×1	Iron12×12×1	Iron18×18×1 Iron25×25×1	Iron25×25×1 Iron25×25×1 Iron35×35×1	Iron30×30×1 Iron45×45×1	Iron60×60×1	Iron25×25×1
Hysteresis	Less than 10 % of sensing distance						
Power supply voltage	12 - 24 V d.c (5 - 35 V d.c)						
Control output	Resistive load : 200 mA max.						
Residual voltage	1.5 V max						
Current consumption	6 mA max						
Operation indication	Red LED						
Protective circuit	Power reversely connected protective circuit, surge protective circuit and over current protective circuit are built in.						
Ambient temperature	-25 ~ 70 °C (Less than $\pm 10\%$ of sensing distance at temperature 20 °C)						
Ambient humidity	35 ~ 85 % R.H						
Degree of protection	IP67 (IEC standard)						
Vibration resistance	10 - 55 Hz (cycle 1 min, double amplitude : 1.5 mm 2 hours for each of X, Y and Z directions)						
Dielectric strength	For 1 min at 2000 V a.c 50/60 Hz (between the recharging part and case)						
Shock resistance	500 % 3 times to each, X, Y and Z directions						
Insulation resistance	50 MΩ min (500 V d.c mega standard)						
Material	CASE : PBT resin						

■ DC 2 wire type

Model	UP8S-2□□	UP12S-4□□	UP 18S-5□□ UP 18S-8□□	UP 25S-5□□ UP 25S-8□□ UP 25S-12□□	UP30S-10□□ UP30S-15□□	UP 40S-20□□	UP 25F-8□□
Sensing distance	2 mm	4 mm	5 mm, 8 mm	5mm, 8mm, 12mm	10 mm, 15 mm	20 mm	8 mm
Setting distance	0 - 1.6 mm	0 - 3.2 mm	0 - 4 mm, 0 - 6.4 mm	0-4mm, 0-6.4mm, 0-9.6mm	0 - 8 mm, 0 - 12 mm	0 - 16 mm	0 - 6.4 mm
Response frequency	800 Hz	500 Hz	500, 300 Hz	350, 250, 200 Hz	250, 100 Hz	100 Hz	200 Hz
Standard sensing object (mm)	Iron8×8×1	Iron12×12×1	Iron18×18×1 Iron25×25×1	Iron25×25×1 Iron25×25×1 Iron35×35×1	Iron30×30×1 Iron45×45×1	Iron60×60×1	Iron25×25×1
Hysteresis	Less than 10 % of sensing distance						
Power supply voltage	12 - 24 V d.c (10 - 30 V d.c)						
Control output	Resistive load : 100 mA max.						
Residual voltage	T (Polarity) : 3.5 V max, U (No polarity) : 5 V max						
Leakage current	1 mA max						
Operation indication	Red LED						
Protective circuit	surge protective circuit and over current protective circuit are built in.						
Ambient temperature	-25 ~ 70 °C (Less than $\pm 10\%$ of sensing distance at temperature 20 °C)						
Ambient humidity	35 ~ 85 % R.H						
Degree of protection	IP67 (IEC standard)						
Vibration resistance	10 - 55 Hz (cycle 1 min, double amplitude : 1.5 mm 2 hours for each of X, Y and Z directions)						
Dielectric strength	For 1 min at 2000 V a.c 50/60 Hz (between the recharging part and case)						
Shock resistance	500 % 3 times to each, X, Y and Z directions						
Insulation resistance	50 MΩ min (500 V d.c mega standard)						
Material	CASE : PBT resin						

AC 2 wire type

Model	UP 25S-5A□ UP 25S-8A□	UP 30S-10A□ UP 30S-15A□	UP 40S-20A□	UP 25F-8A□
Sensing distance	5 mm, 8 mm	10 mm, 15 mm	20 mm	8 mm
Setting distance	0 - 4 mm, 0 - 6.4 mm	0 - 8 mm, 0 - 12 mm	0 - 16 mm	0 - 6.4 mm
Response frequency	20 Hz			
Standard sensing object (mm)	Iron 25×25×1 Iron 30×30×1	Iron 40×40×1 Iron 50×50×1	Iron 60×60×1	Iron 25×25×1
Hysteresis	Less than 10 % of sensing distance			
Power supply voltage	100 - 240 V a.c (90 - 250 V a.c)			
Control output	Resistive load : 200 mA max.			
Residual voltage	10 V a.c max			
Leakage current	2.2 mA max			
Operation indication	Red LED			
Protective circuit	surge protective circuit built in.			
Ambient temperature	-25 ~ 70 °C (Less than ±10 % of sensing distance at temperature 20 °C)			
Ambient humidity	35 ~ 85 % R.H			
Degree of protection	IP67 (IEC standard)			
Vibration resistance	10 - 55 Hz (cycle 1 min, double amplitude : 1.5 mm 2 hours for each of X, Y and Z directions)			
Dielectric strength	For 1 min at 2000 V a.c 50/60 Hz (between the recharging part and case)			
Shock resistance	500 % 3 times to each, X, Y and Z directions			
Insulation resistance	50 MΩ min (500 V d.c mega standard)			
Material	CASE : PBT resin			

Dimension

[Unit : mm]

Model	Installation hole panel cutout	Dimension
UP8S		
UP12S		
UP18S UP25S UP30S UP40S		

Model	Bolt size	A	B	C	D	E	F	G	H
UP8S	None	8	8	8	8	7.4	0.6	28	2
UP12S	None	15.1	15	12	12	11	1	45	14.5
UP18S	M3X20	11	31.4	18	18	14	0.5	36	15
UP25S	M4X22	18	36.3	25	25	17.2	1	39.5	15
UP30S	M4X30	22	49.3	30	30	21	0.8	53.5	16.5
UP40S	M5X40	29	47.8	40	40	25.5	1	53.3	16.5


Supporter

UP8S series	
UP12S series	
UP18S series	
UP25S series	
UP30S series	
UP40S series	
UP25F series	

Connection diagram

Type	Connection method	Output state																				
D.C open / close	NPN		<table><tr><th></th><th>NO</th><th>NC</th></tr><tr><td>Sensing object</td><td>Yes No</td><td></td><td></td></tr><tr><td>LOAD [Brown - Black]</td><td>Run Return</td><td></td><td></td></tr><tr><td>Output voltage</td><td>H L</td><td></td><td></td></tr><tr><td>Operation indicator</td><td>ON OFF</td><td></td><td></td></tr></table>		NO	NC	Sensing object	Yes No			LOAD [Brown - Black]	Run Return			Output voltage	H L			Operation indicator	ON OFF		
			NO	NC																		
		Sensing object	Yes No																			
		LOAD [Brown - Black]	Run Return																			
	Output voltage	H L																				
	Operation indicator	ON OFF																				
	PNP		<table><tr><th></th><th>NO</th><th>NC</th></tr><tr><td>Sensing object</td><td>Yes No</td><td></td><td></td></tr><tr><td>LOAD [Brown - Black]</td><td>Run Return</td><td></td><td></td></tr><tr><td>Output voltage</td><td>H L</td><td></td><td></td></tr><tr><td>Operation indicator</td><td>ON OFF</td><td></td><td></td></tr></table>		NO	NC	Sensing object	Yes No			LOAD [Brown - Black]	Run Return			Output voltage	H L			Operation indicator	ON OFF		
			NO	NC																		
		Sensing object	Yes No																			
		LOAD [Brown - Black]	Run Return																			
	Output voltage	H L																				
	Operation indicator	ON OFF																				
2 Wire		<table><tr><th></th><th>NO</th><th>NC</th></tr><tr><td>Sensing object</td><td>Yes No</td><td></td><td></td></tr><tr><td>LOAD [Brown - Black]</td><td>Run Return</td><td></td><td></td></tr><tr><td>Operation indicator</td><td>ON OFF</td><td></td><td></td></tr></table>		NO	NC	Sensing object	Yes No			LOAD [Brown - Black]	Run Return			Operation indicator	ON OFF							
		NO	NC																			
	Sensing object	Yes No																				
	LOAD [Brown - Black]	Run Return																				
Operation indicator	ON OFF																					
AC open / close		<table><tr><th></th><th>NO</th><th>NC</th></tr><tr><td>Sensing object</td><td>Yes No</td><td></td><td></td></tr><tr><td>LOAD [Brown - Black]</td><td>Run Return</td><td></td><td></td></tr><tr><td>Operation indicator</td><td>ON OFF</td><td></td><td></td></tr></table>		NO	NC	Sensing object	Yes No			LOAD [Brown - Black]	Run Return			Operation indicator	ON OFF							
		NO	NC																			
	Sensing object	Yes No																				
	LOAD [Brown - Black]	Run Return																				
Operation indicator	ON OFF																					


How to set distance

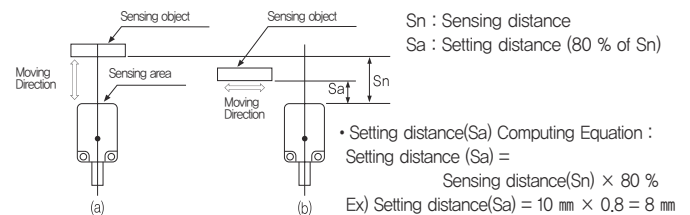


- When a proximity sensor is operating as a sensing object is approaching, a distance between the sensing surface and the sensing object is the operating distance of the proximity sensor.
- After measuring a maximum value of a perpendicular direction of a sensing object, install it within 80 %.
- When testing a sensing distance of a proximity sensor, a standard sensing object was used so a sensing distance can be varied by its shape, form or material. Please, consider these facts.

How to use differential wave method

- In case of attaching proximity sensors, malfunction can be occurred by mutual interference when the proximity sensors are closely attached. Therefore, please use proximity sensor of Differential Wave Type like the picture shown in the right. Differential Wave Type is only available in Square Type of 18 or 25.

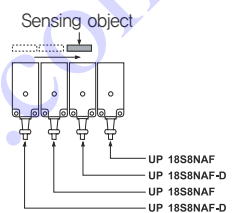

Mutual interference and effects of surrounding metals

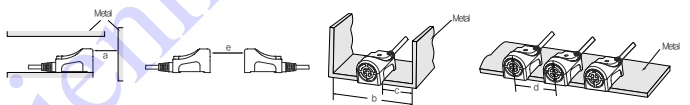

[Unit : mm]

Model	UP 8S	UP 12S	UP 18S	UP 18S	UP 25S	UP 25S	UP 25S	UP 30S	UP 30S	UP 40S
List	-2□□	-4□□	-5□□	-8□□	-5□□	-8□□	-12□□	-10□□	-15□□	-20□□
a	6	12	15	24	15	24	36	30	45	60
b	24	36	-	54	-	-	75	-	90	-
c	8	12	18	18	25	25	25	30	30	40
d	16	24	36	36	50	50	50	60	60	80
e	12	24	30	48	30	48	72	60	90	120